DESCRIPTION OF PARTS

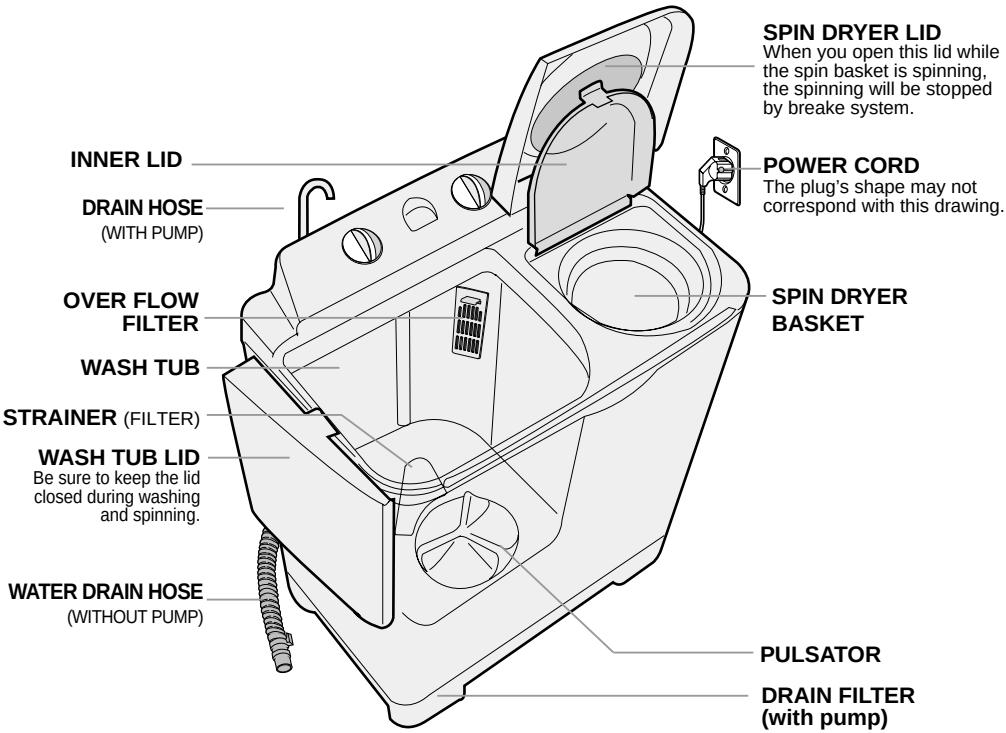
SPIN DRYER LID
When you open this lid while the spin basket is spinning, the spinning will be stopped by breake system.
INNER LID
POWER CORD
The plug's shape may not correspond with this drawing.
DRAIN HOSE
(WITH PUMP)
OVER FLOW FILTER
SPIN DRYER BASKET
WASH TUB
STRAINER (FILTER)
WASH TUB LID
Be sure to keep the lid closed during washing and spinning.
WATER DRAIN HOSE
(WITHOUT PUMP)
PULSATOR
DRAIN FILTER (with pump)

CONTROL PANEL

1.WASH TIMER
This is used to set the wash time, 1-15 minutes.

2.CYCLE SELECTOR
This is used to select the Washing / Rinsing or draining

3. SPIN DRY TIMER
This is used to set the spin time, 1-5 minutes.(or 1-10 minutes)

4.WATER SELECTOR
During washing,WATER SELECTOR KNOB should be selected to wash.During spin rinsing,WATER SELECTOR KNOB should be selected to spin.

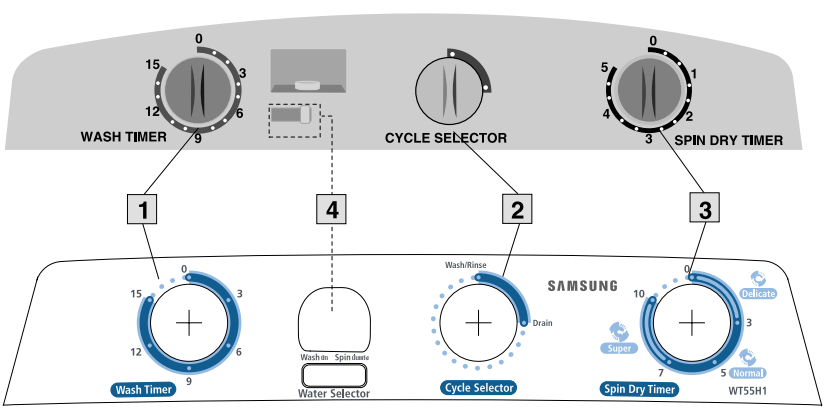

WASHING PROCEDURE

TO WASH

1. Before starting washing, check the following;

Connect the water supply hose and open the water tap.
- Lay the drain hose down toward a sinkhole.
(In case no drain pump)
- Place the drain hose in sink or bath.
(In case drain pump)
-Connect the power cord to the power supply outlet .

2. Set the CYCLE SELECTOR KNOB to 'WASH . RINSE'. (in case drain pump "WASH")



CYCLE SELECTOR



CYCLE SELECTOR

3. Set the WATER SELECTOR KNOB to WASH .

4. Fill water in the wash tub and add the detergent.

5. Load laundry in the wash tub and fill water to 'H'high water level.

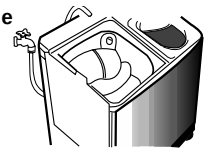

6. Set the WASH TIMER 1-15minutes.



WASH TIMER

7. After washing,set the CYCLE SELECTOR KNOB to 'DRAIN' for drain.



CYCLE SELECTOR

SPIN DRY

1. Transfer the clothes into the spin basket and arrange the clothes evenly.

2. Be sure to attach the safety cover and close the inner lid.

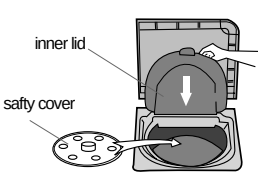

3. Close the spin dryer lid.

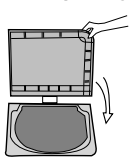

4. Set the SPIN DRY TIMER 1-5minutes. (or 1-10minutes)



SPIN DRY TIMER

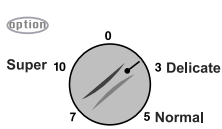

SPIN DRY TIMER

RINSING

1. Set the CYCLE SELECTOR KNOB to 'WASH RINSE'. (In case drain pump "WASH")

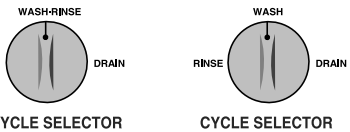

2. Supply the proper amount of water as not to overflow the top of the washing tub.

3. Set the WASH TIMER 2~3minutes.

4. Drain the water. Set the CYCLE SELECTOR KNOB to 'DRAIN'



5.Repeat this cycle until drain water is clean. (2~3 cycle)

OVER FLOW RINSE

1.Keep suppling water

Adjust water pressure to ensure that the amount of water supplied does not exceed that water drained.

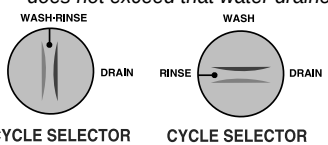

2.Set the WASH TIMER 6~8minutes.



3.As soon as the WASH TIMER shuts off, turn off the water tap.

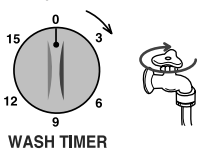

4. Set the CYCLE SELECTOR KNOB to 'DRAIN'.

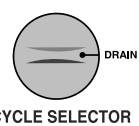

ADDITIONAL RINSE

1 *After rinsing you can select this course for more effective rinse (Don't select only this course for rinse.)* Load the laundry evenly into the spin basket.

2 Set the WATER SELECTOR KNOB to SPIN and CYCLE SELECTOR KNOB to 'DRAIN'.



3 Supply water for about 1minute. Adjust the water flow to prevent overflow from the wash tub.

1 min.

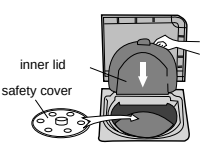

4 After stopping water supply, cover the laundry with safety cover and close the inner lid.

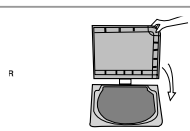

5 Close the spin dryer lid.

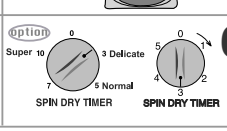

6 Set the SPIN DRY TIMER 2~3 minutes.